



步骤一：找到自己需要的元器件，在下载页面点击下载.schlib 或.pclib 文件：

软件信息	参考设计	资料库	参数
软件名称	软件类型	软件积分	操作
dp83620sq-nopb.schlib	Altium Design原理图Symbol	2	<a href="#">下载</a>
mlf48-20-0707a.pclib	Altium Designer PCB 封装	2	<a href="#">下载</a>
dp83620sq-nopb.olb	OrCAD原理图Symbol	2	<a href="#">下载</a>
mlf48-20-0707a.llb	OrCAD PCB封装	2	<a href="#">下载</a>
dp83620sq-nopb.zip	PADS原理图Symbol与PCB封装	2	<a href="#">下载</a>
dp83620sq-nopb.lbr	Eagle原理图Symbol与PCB封装	2	<a href="#">下载</a>


步骤二：将所下载的文件存入工程目录下，打开 altium designer, 在如下菜单当中打开 library 界面

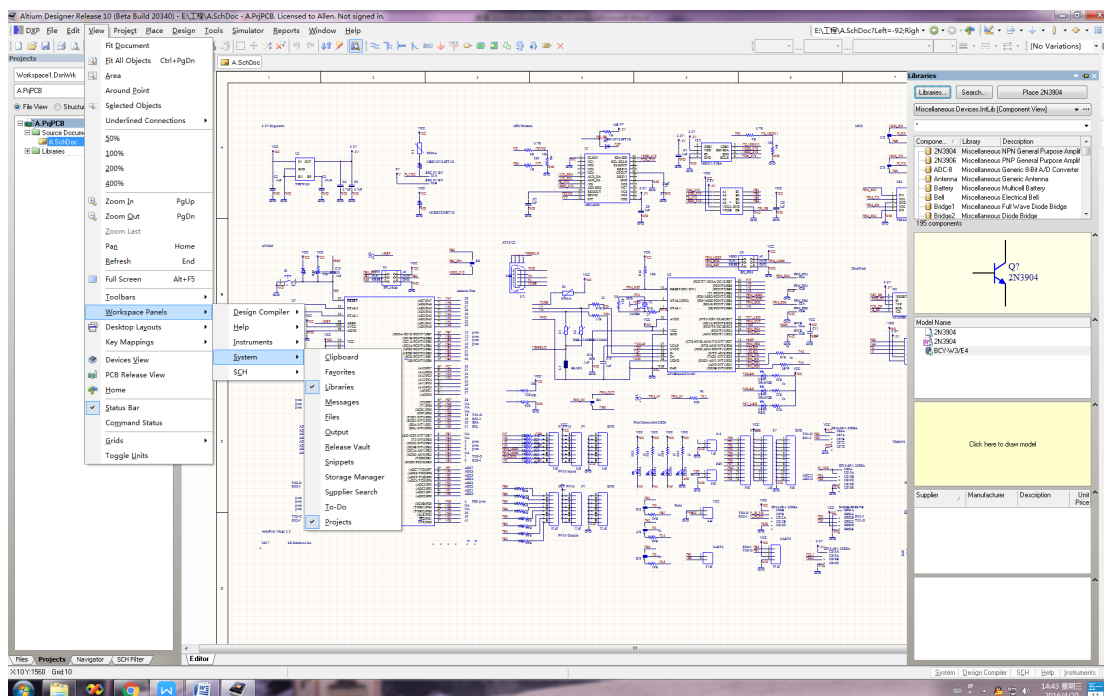

步骤三：在右侧工具栏中选择 library

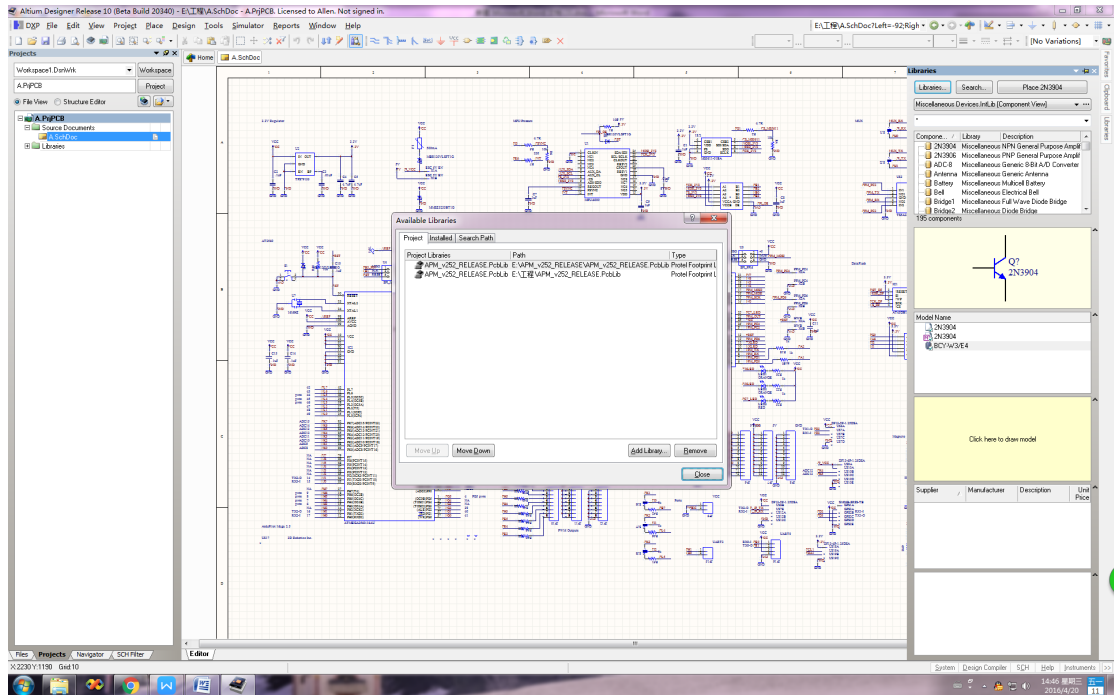

#### 步骤四：添加该 library

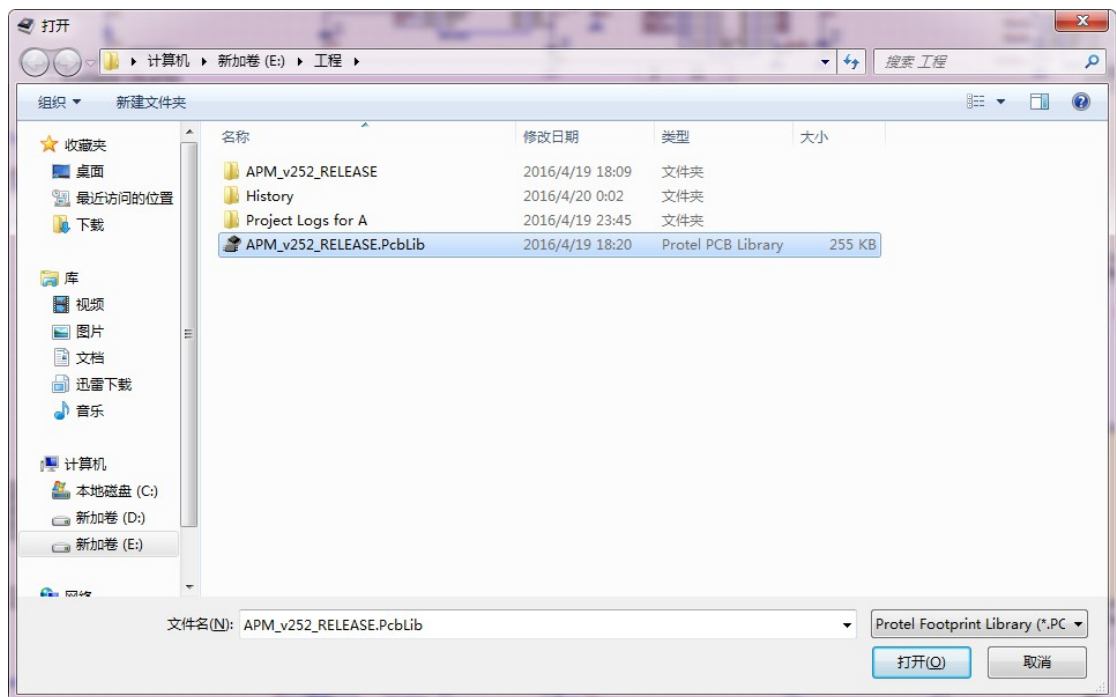

#### 步骤五：双击 library 中的元器件，在原理图中放置

**Libraries** [Close] [Refresh]

Libraries... Search... Place MediumQTouchSlider

Atmel QTouch.IntLib [Component View] [More]

\* [Dropdown]

Compon...	Library	Description
MediumL	Atmel QTouch	Medium & Large QMatrix Wh
MediumQ	Atmel QTouch	Medium QMatrix Slider
MediumQ	Atmel QTouch	Medium QTouch Slider
MediumQ	Atmel QTouch	Medium QTouch Wheel
MediumR	Atmel QTouch	Medium Resistively Interpolate
MediumR	Atmel QTouch	Medium Resistively Interpolat
QMatrixB	Atmel QTouch	QMatrix Button
QTouchB	Atmel QTouch	QTouch Button

12 components

**CS?**

**Medium QTouch Slider**

Model Name

No Preview Available

Supplier	Manufacturer	Description	Unit Price

